




HP Envy 17-3070NR Optical Drive Replacement

In this guide, we will show you how to replace your optical drive.

Written By: Jon Fuson

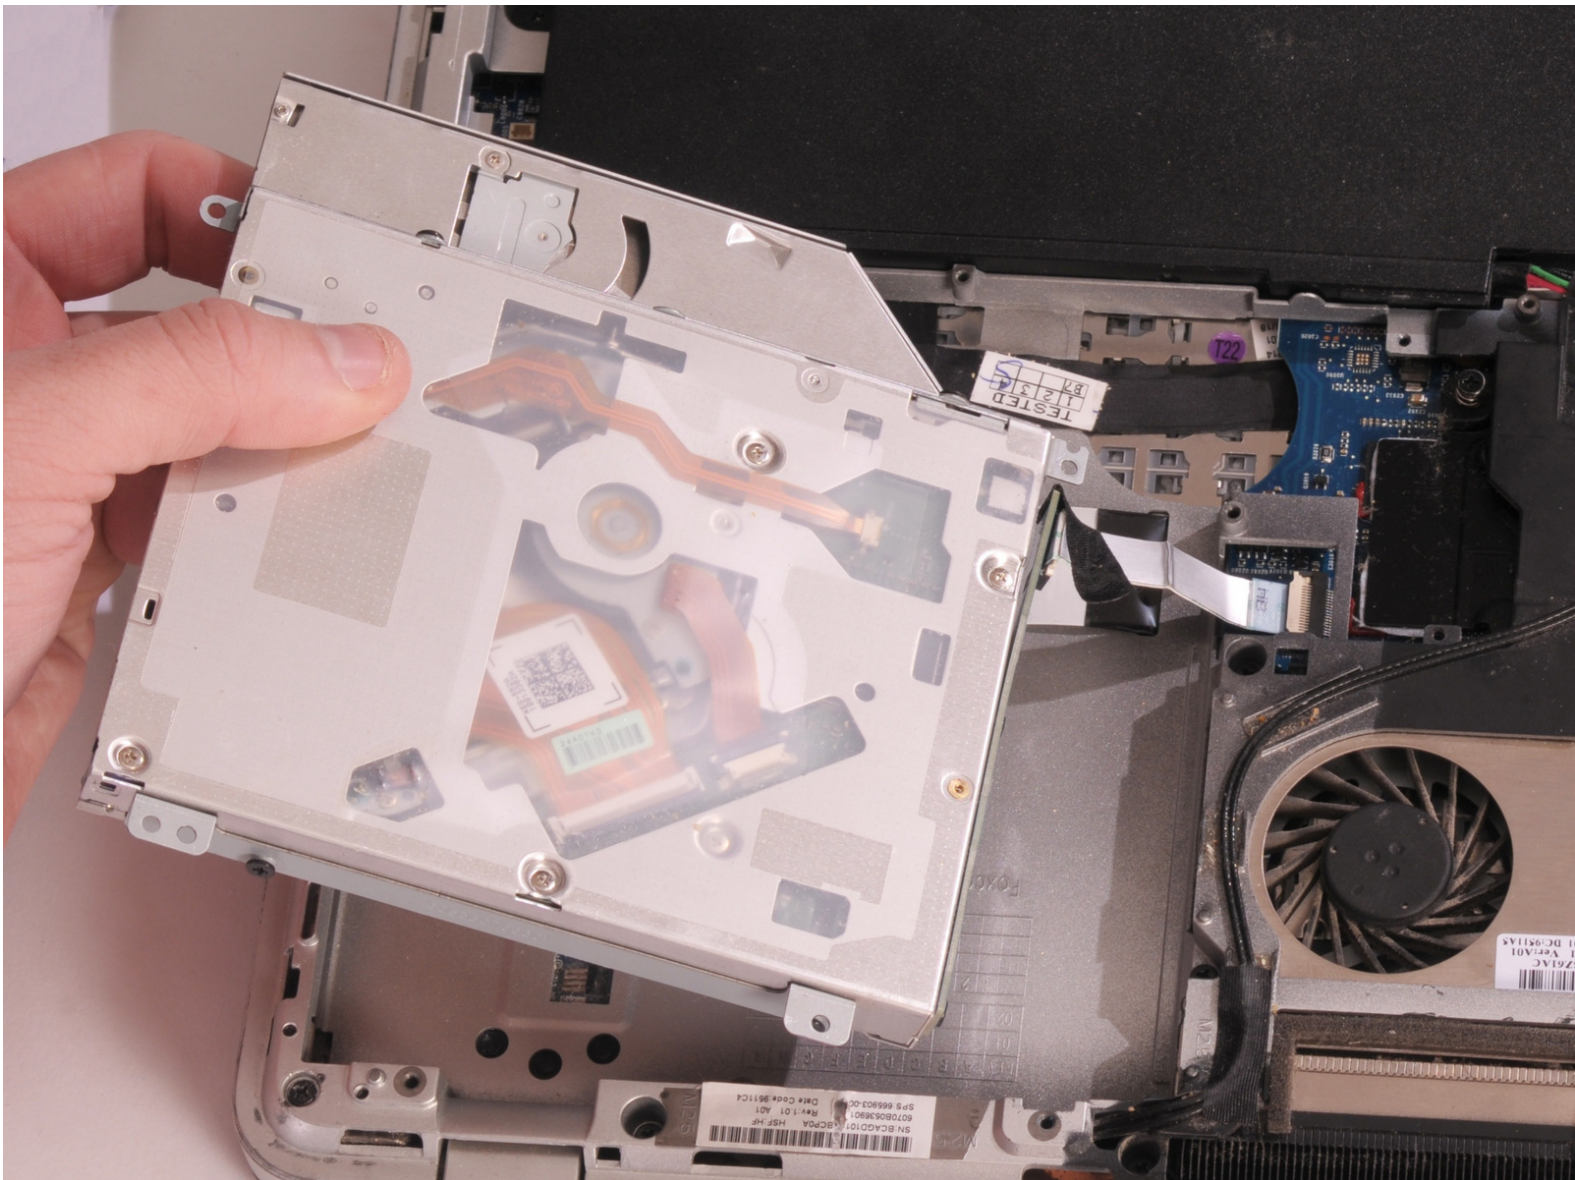

INTRODUCTION

Whether you want to replace your faulty DVD drive or upgrade to a Blue-Ray one, this guide is for you.




TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Flathead Screwdriver](#) (1)
-




Step 1 — Back Cover



 Before you begin taking apart the computer, make sure that it is completely powered off.


- Slide the release latch away from the nearest edge.
- Slide the back cover off of the computer.

Step 2

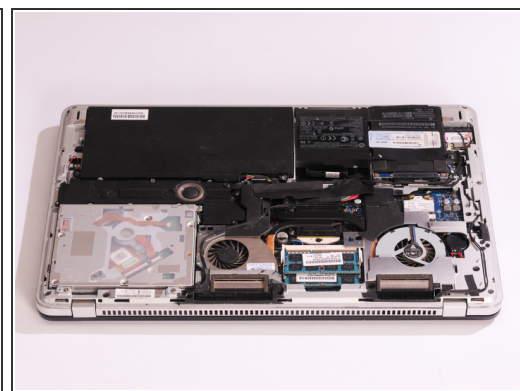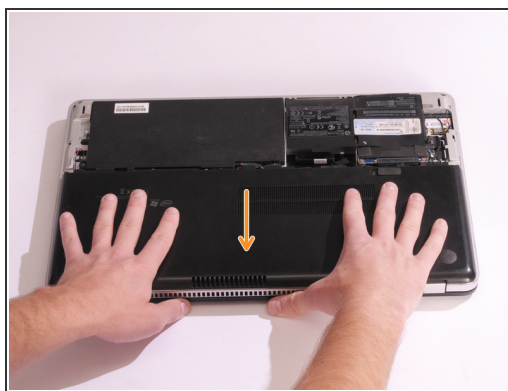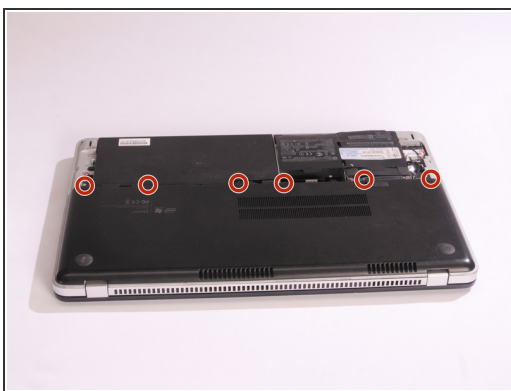


- Remove the six 3.7mm Phillips screws.
- Slide the back cover until it clicks, then lift it straight off.

Step 3 — Optical Drive

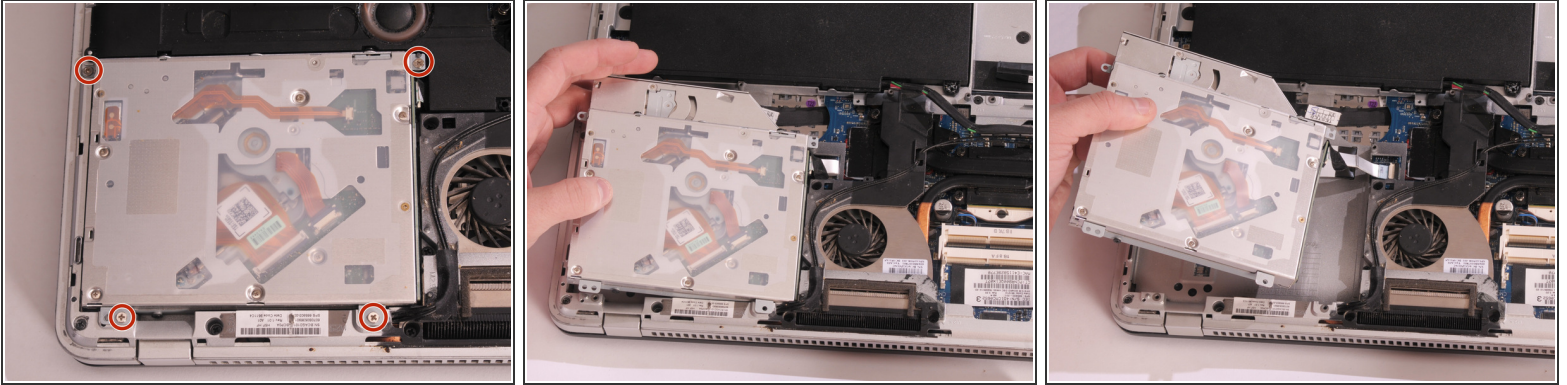

- Remove the four 3.7mm Phillips screws that secure the optical drive to the computer.
 - Slowly lift the optical drive away from the computer ensuring that you don't put stress on the connecting cable.
- ⚠ Do not fully lift off the optical drive as there is still a cable that connects it to the motherboard.

Step 4

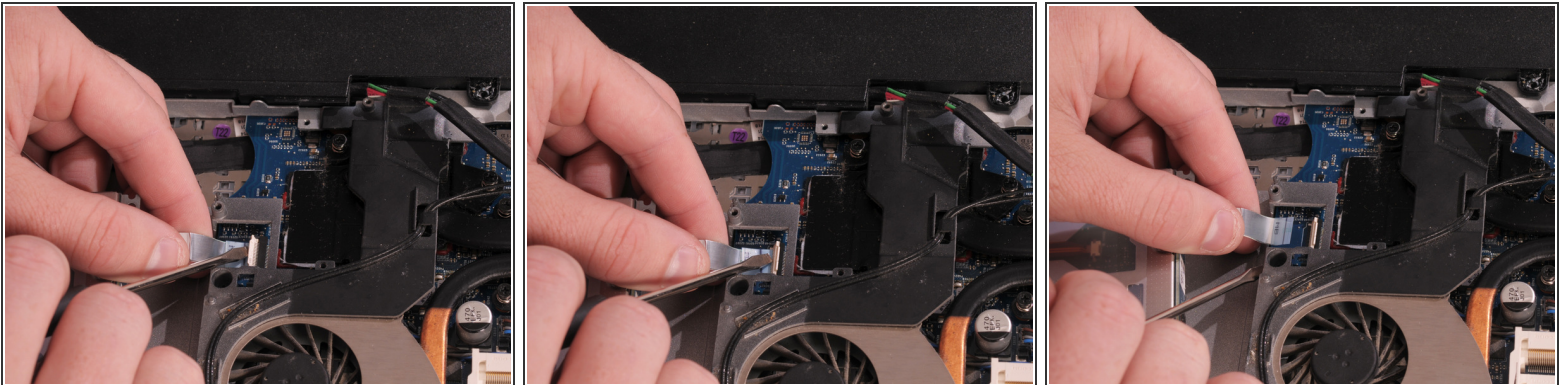

- Carefully disconnect the connecting cable by lifting the white clamp with a Flathead screwdriver and pulling on the blue tab away from connector.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 07:43:04 AM.